




4. Now insert the two U-Shape pipe sections through the end of the two rectangular strips at the bottom of the pool FIG. 3. Now, insert the capped ends of the U-Shape pipe into the holes in the Horizontal Beam assembly FIG. 3 depress the buttons pushing the Cap entirely into the horizontal beam until it stops.
5. Make sure both U-Shape pipes are inserted fully and check that all connected sections are still securely fastened. Repeat steps for the frame on the opposite side of the pool.

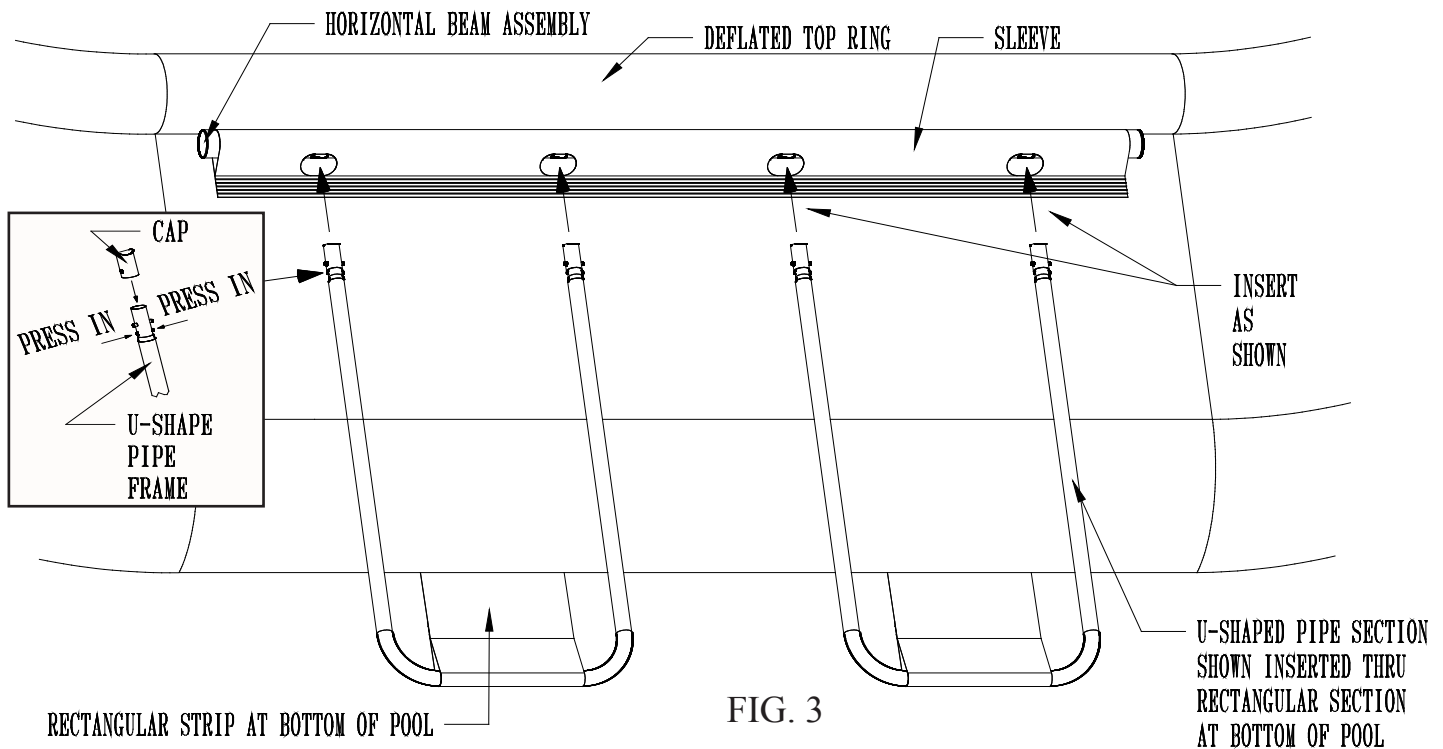

6. Inflate the top ring. Squeeze the base of the valve stem to open an internal check valve while inflating.
7. Start filling the pool with water. After about 1-inch of water is on the bottom, stop filling and smooth wrinkles out of the bottom of the pool. Pull the outer wall out from under the top ring, all around the bottom of the pool, so that it fills evenly.
8. NOTE: IF MORE THAN 1-2 INCHES OF WATER COLLECTS ON ANY ONE SIDE BEFORE THE POOL STARTS FILLING IN THE CENTER, THE POOL IS NOT LEVEL ENOUGH, AND MUST BE CORRECTED, SEE "SITE PREPARATION", PAGE 1. NOTE: THE WEIGHT OF THE WATER WILL PREVENT ANY ADJUSTMENT AFTER THIS POINT.
9. Following the instructions under "Power Filter Installation" in the "Swimming Pool Filter System" owner's manual, install both sets of Pool Wall Fittings (Items 16-21) as described in Steps "A" - "C"
10. Make sure the drain fitting is plugged securely and the cap is in place. Plug both Pool Wall Fittings (16) from the inside of the pool using two Wall Fitting Plugs (20).
11. Now, as you continue filling, the inflated ring will rise as the water deepens. Fill the pool to the depth shown. Water level should be near the bottom of the ring, see FIG. 4. Once this is done, refer back to the "Swimming Pool Filter System" owner's manual, and continue from Step "D" on through the rest of the installation.

